

QBUS

Disassembly and repair instructions

Personal storage



Removal/replacement instructions

Spare parts

Page 2

Lock

Page 3

Door/hinge

Page 4

Disassembly

Frame

Page 5

Save this document for future use.





This document provides information that may be subject to change without prior notice.

QBUS

Disassembly and repair instructions




Personal storage

Available spare parts


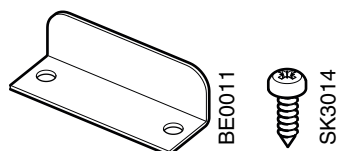
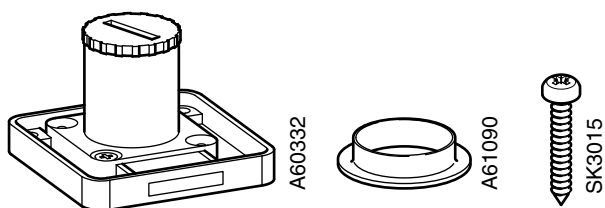
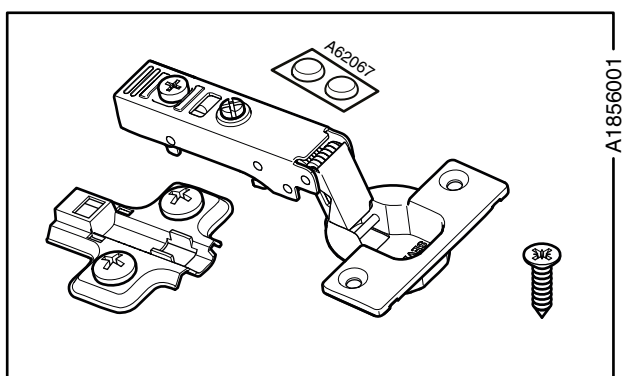
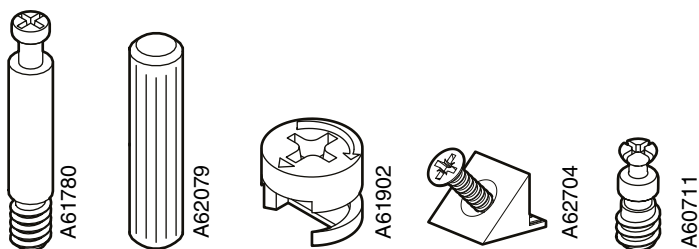


Save this document for future use.
This document provides information that may be subject to change without prior notice.





Lock removal/replacement

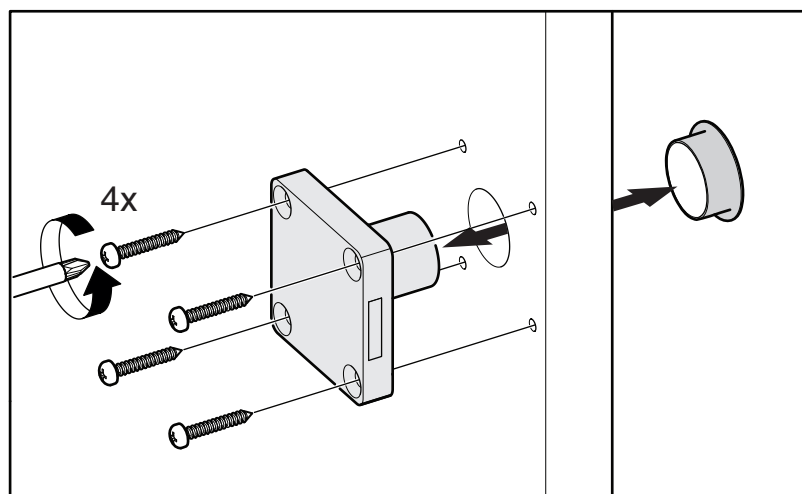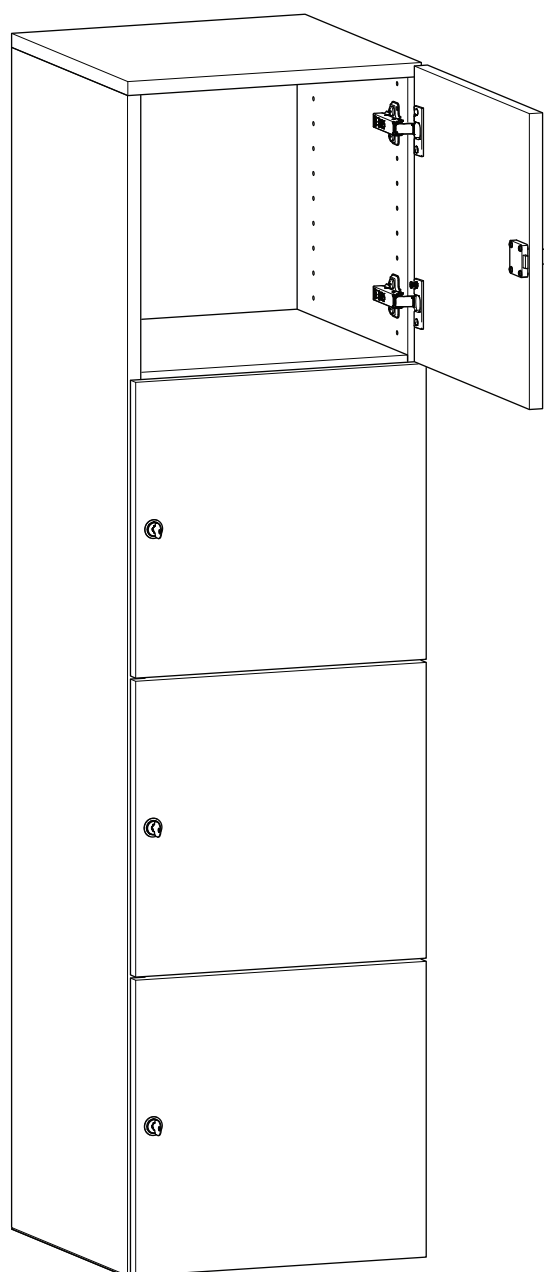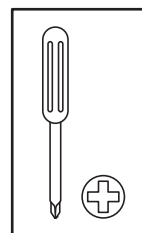







Door & hinge removal/replacement

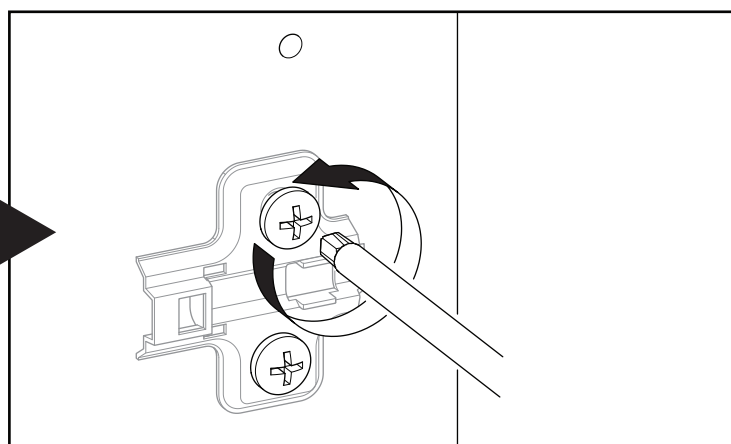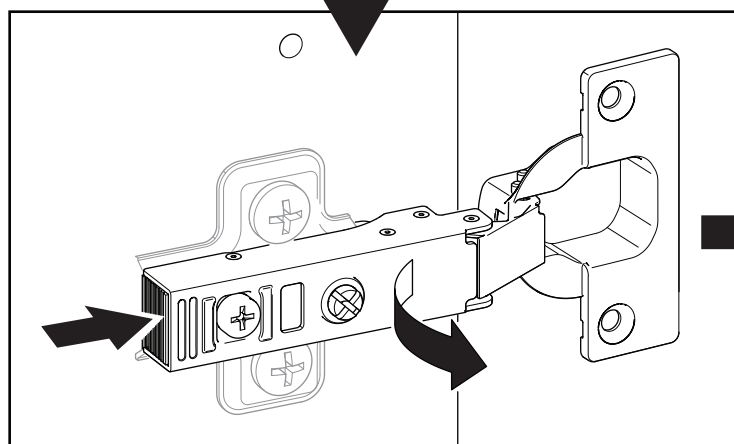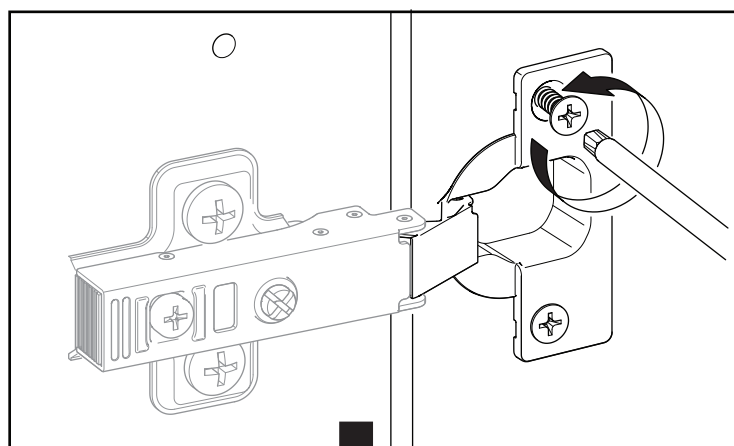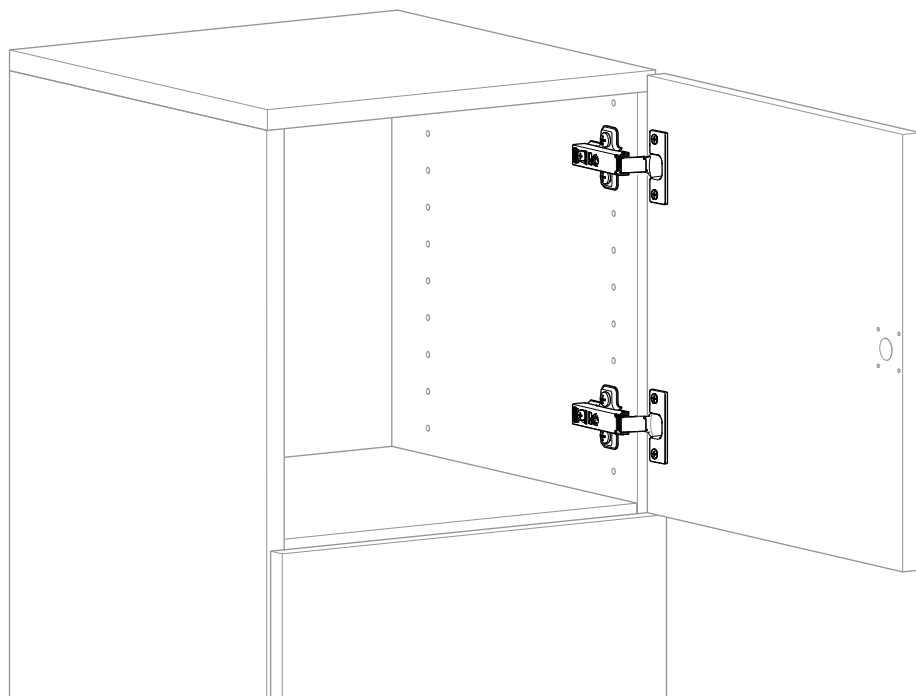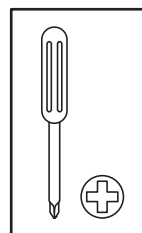


1 Frame disassembly

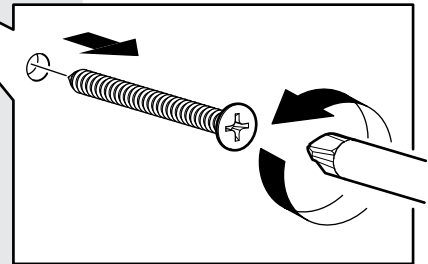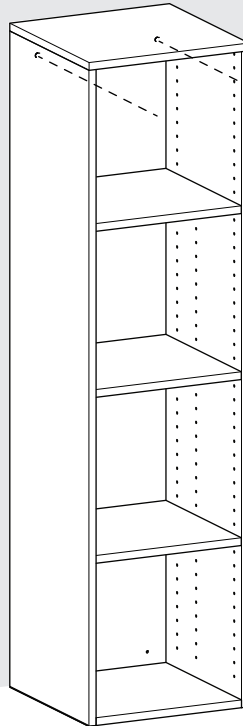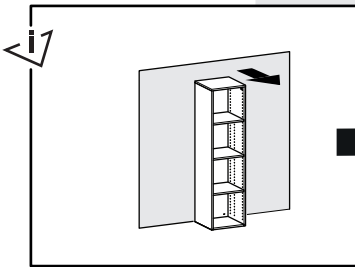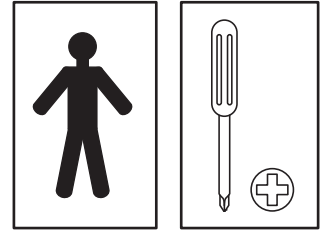


2

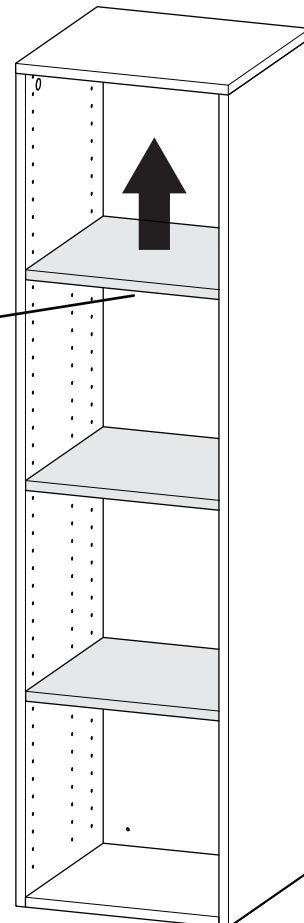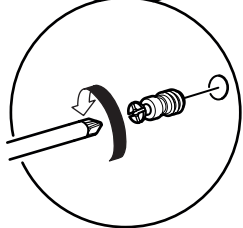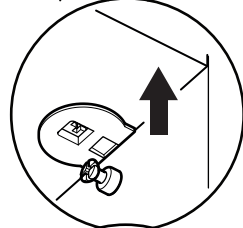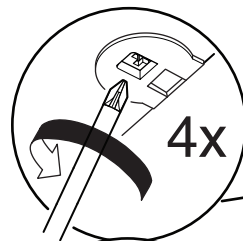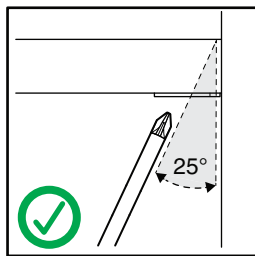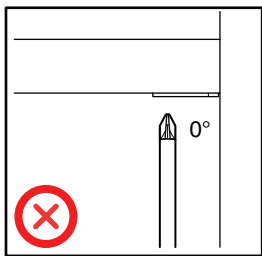

3

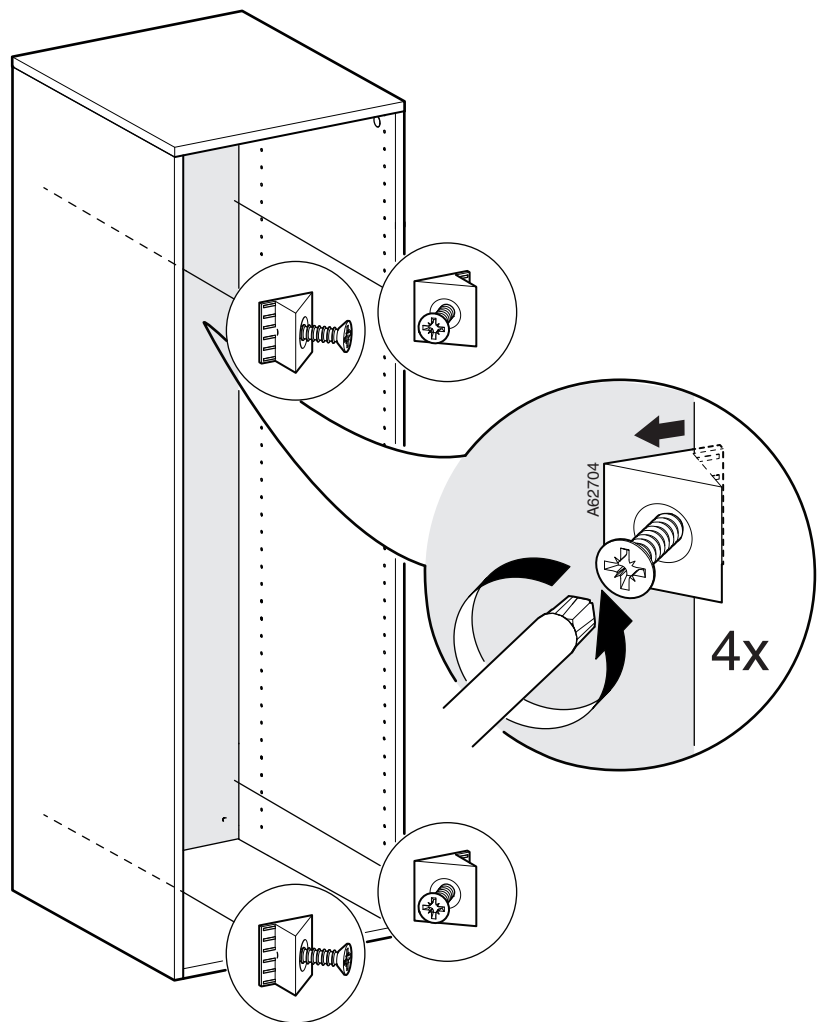

FRONT
OR
BACK

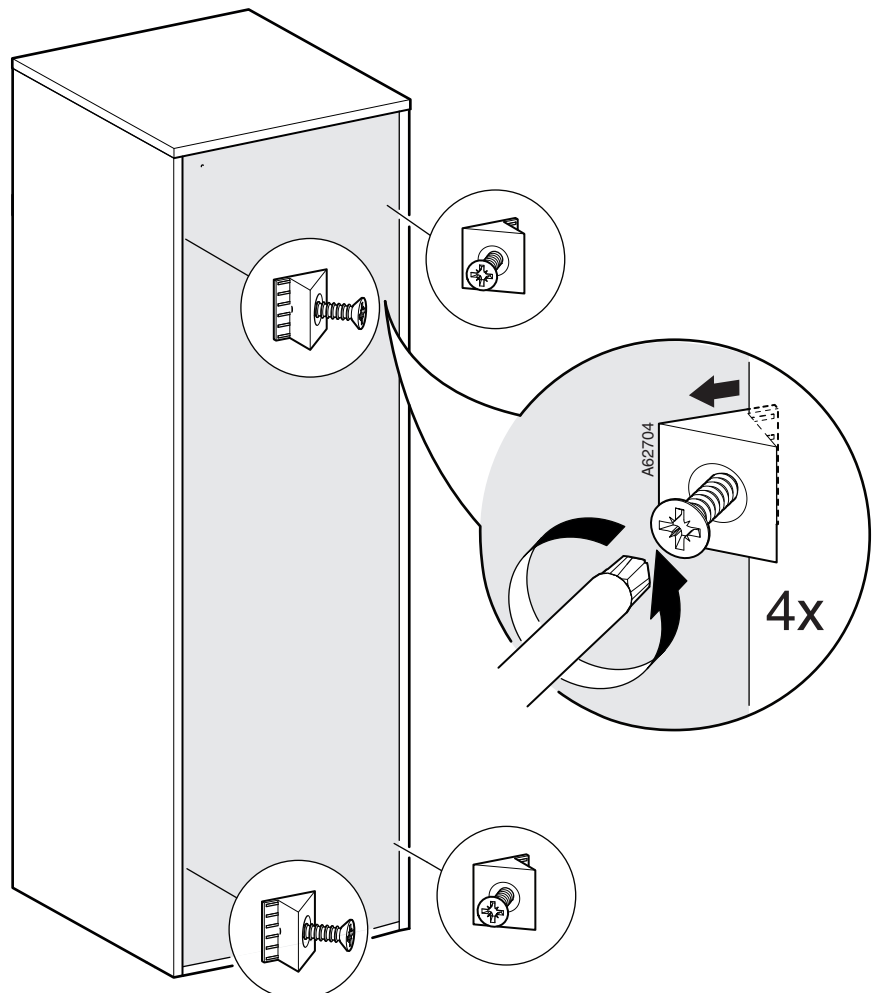

4

