


# Instruction manual

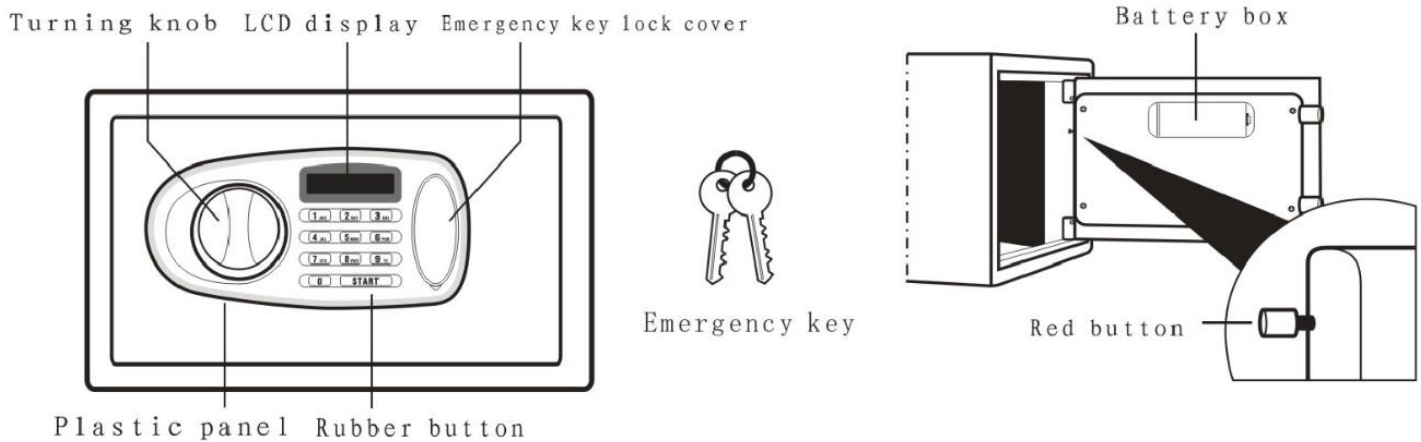

## When opening the safe for the first time: Use the emergency system

### Emergency system

To be used if battery is out of power, user has forgotten code or by malfunction of electronic system.

- Remove key hole cover located in the right part of the plastic panel
- Insert the emergency key into the key hole. Turn key counter clockwise and handle clockwise to open the safe.

### Install battery

Remove the battery box cover on the back of the door, install 4xAA batteries (alkaline cell is recommended).

### Setting and changing of personal code:

Open the door. Press the red button on the inside of the door. The LCD display will show "-----". Input your new 6 digit code and press the red button again. The LCD display will show the new code. A beeping tone will confirm successful setting of the new personal code (old code will be erased).

### Setting and changing of management code

Open the door. Press the red button on the inside of the door. The LCD display will show "-----". Press "START" button. Input your new 6 digit code. The LCD display will show the new code. A beeping tone will confirm successful setting of the new management code (old code will be erased).

**Error indication**

If the user inputs wrong 6 digits code, the LCD display will show "ERROR" and there will be a beeping sound. If the user inputs the wrong code 5 times in a row, the system will be locked for 2 minutes and 30 seconds with continuous beeping warning sound.

**Low battery indication**

If the LCD display shows "LO-BAT" when the user press "START" or red button, it means that the battery has to be changed.