

HURRAY



ASSEMBLY GUIDE

SPARE PARTS

DISASSEMBLY GUIDE


HURRAY

Assembly guide


AJ-A-1060W
V1.2 2024-06-26




PACKAGE CONTENTS

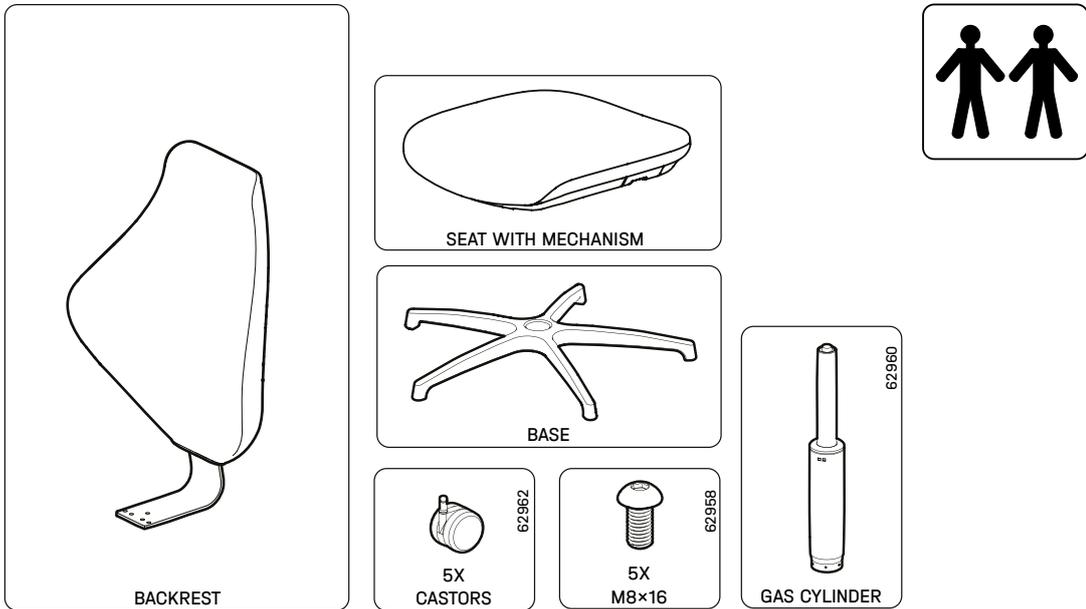


OPTIONAL ACCESSORIES

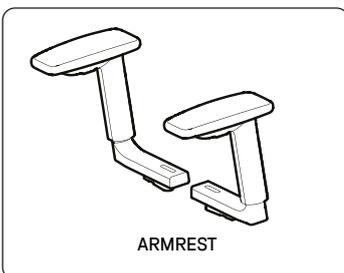



1

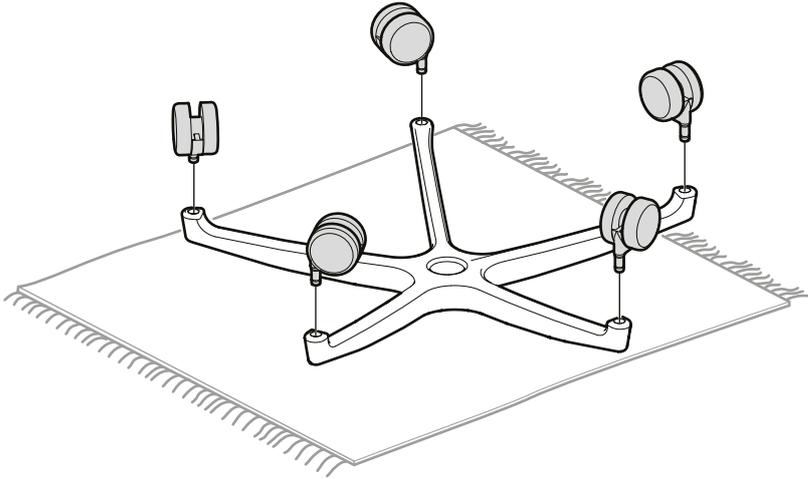

2


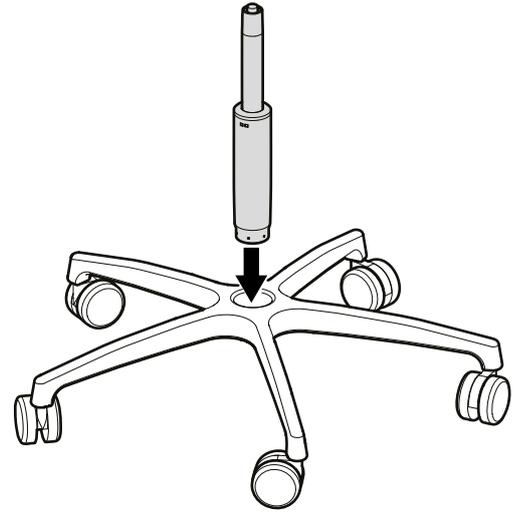


3

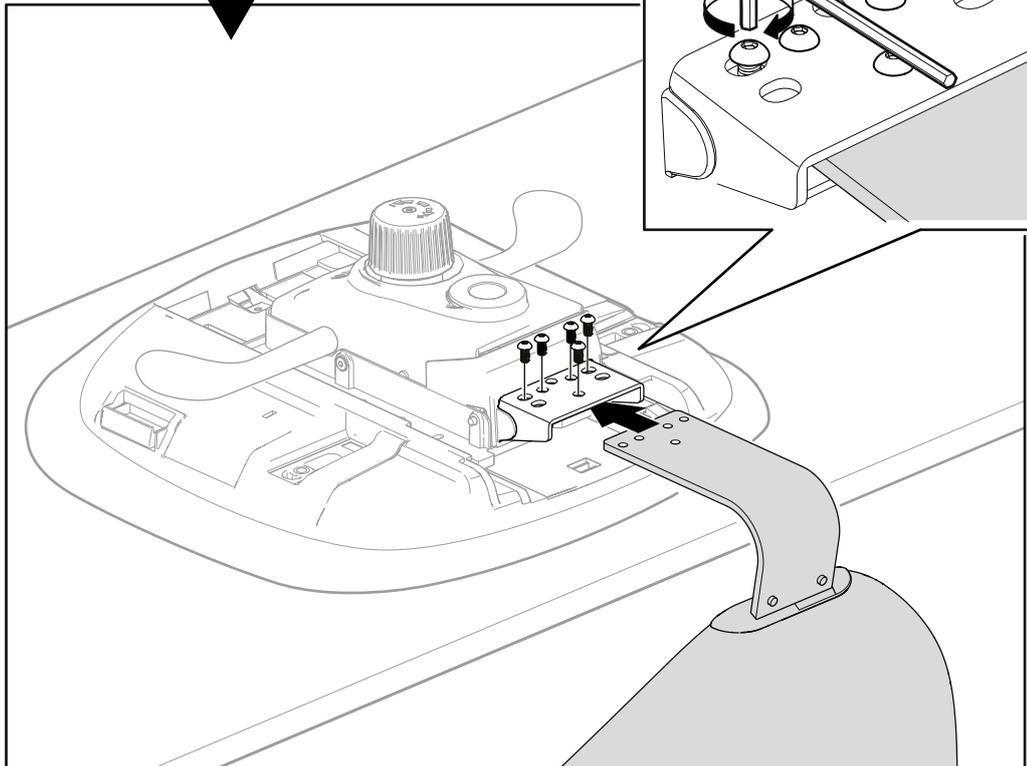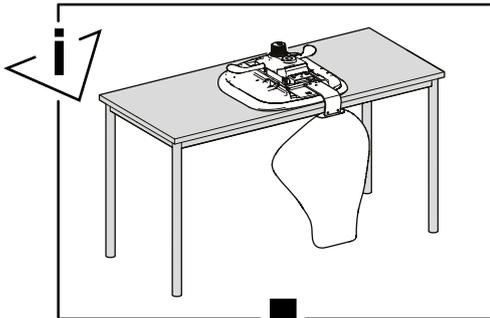



4

OPTIONAL
ARMREST ASSEMBLY - RIGHT

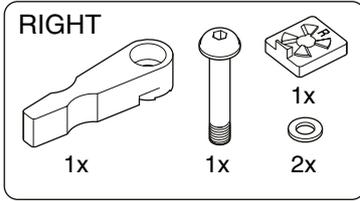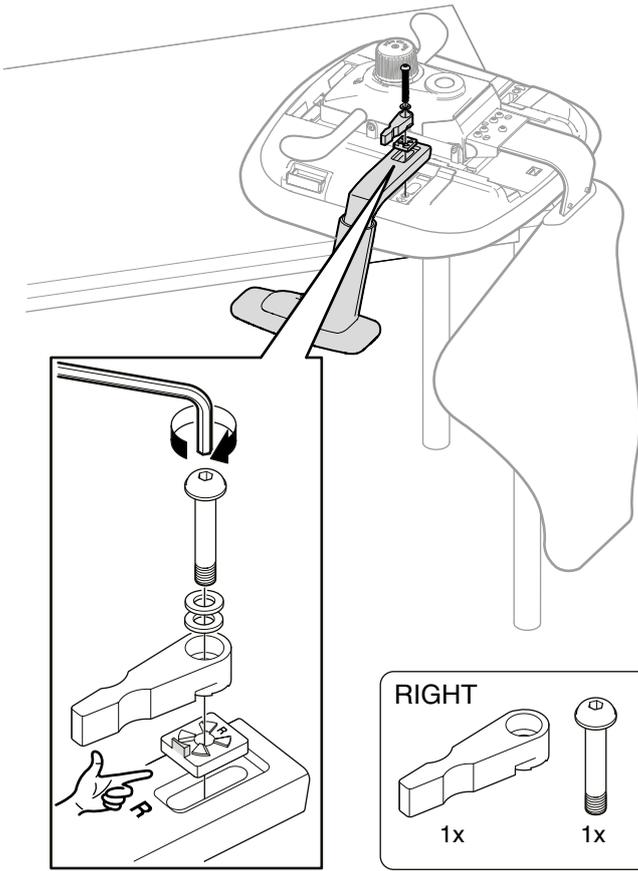


5

OPTIONAL
ARMREST ASSEMBLY - LEFT



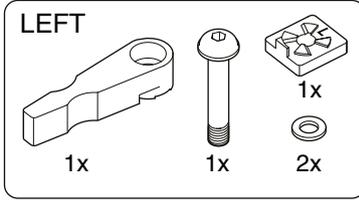
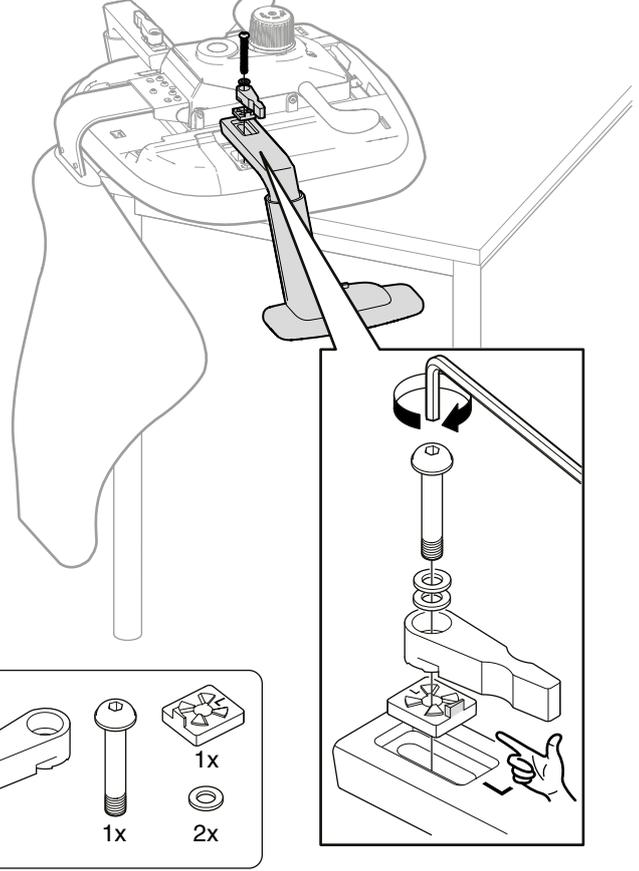


6

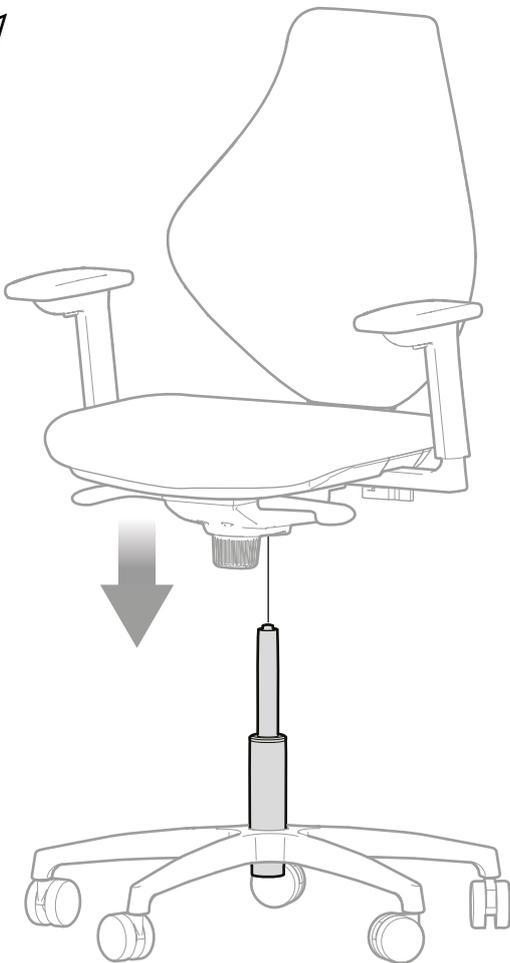


The fabric cover on this chair is washable. Please follow the care instructions label on the cover for guidance.

Additionally, you can find the product disassembly instructions on our website: www.ajproducts.com

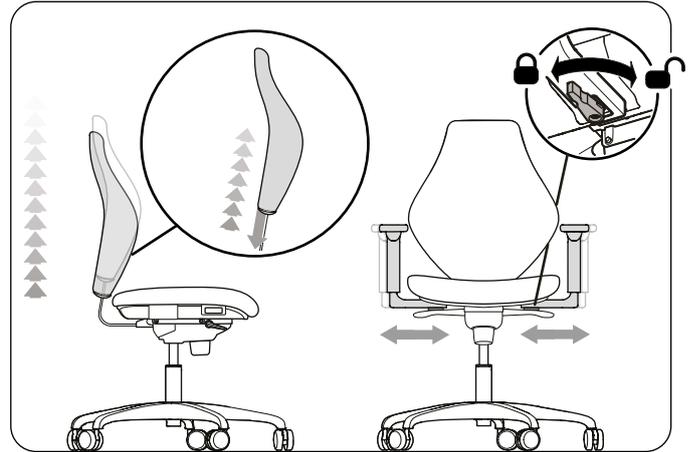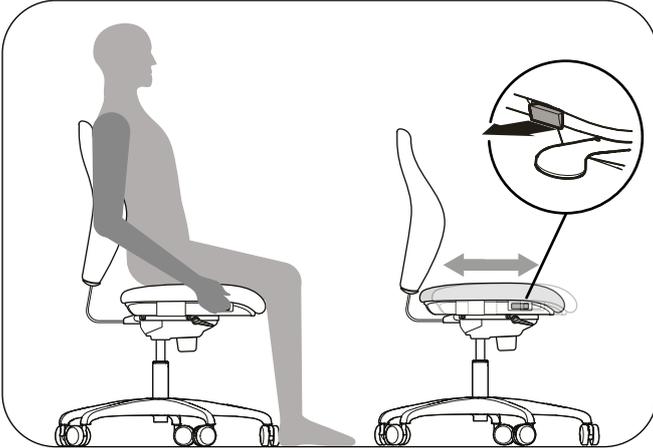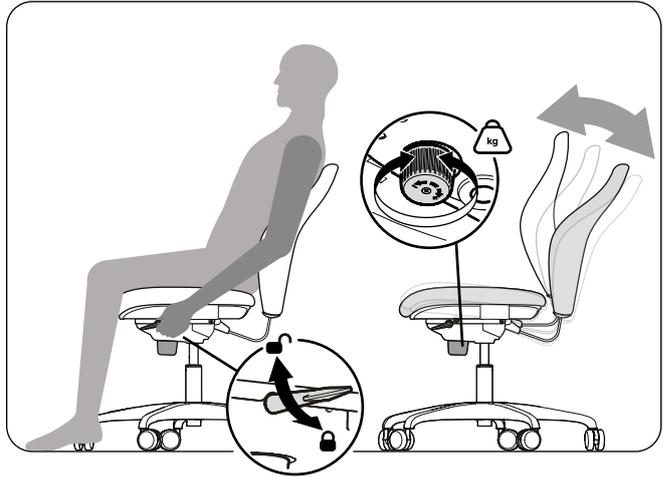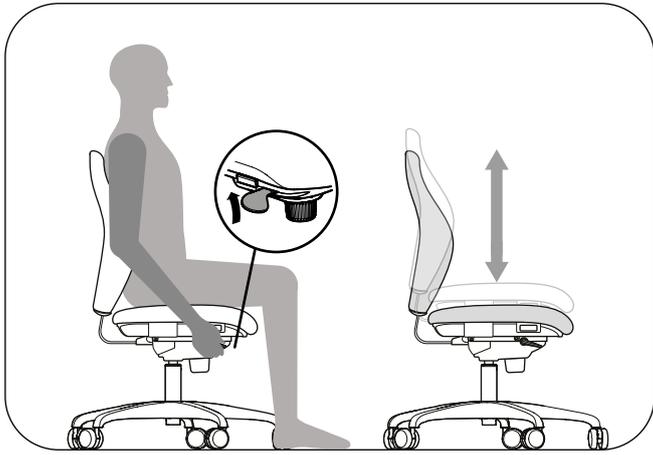

PARTS DIAGRAM AND MATERIALS


Part no.	Description	Material	
1	Backrest cover foam	PU	Plastic
2	Seat cover foam	PU	Plastic
3	Seat foam padding	PU	Plastic
4	Seat shell	PP	Plastic
5	Seat shell	PP	Plastic
6	Seat mechanism	Aluminium	Metal
7	Adjustment knobs/handles	PA	Plastic
8	Cover	PP	Plastic
9	Backrest foam padding	PU	Plastic
10	Backrest shell	Plywood	Wood
11	Cover	PP	Plastic
12	Armrest (pair)	PA	Plastic
13	Gas cylinder	Steel	Metal
14	Wheelbase	PA	Plastic
15	Wheels	PP	Plastic
16	Backrest fixing plate	Steel	Metal

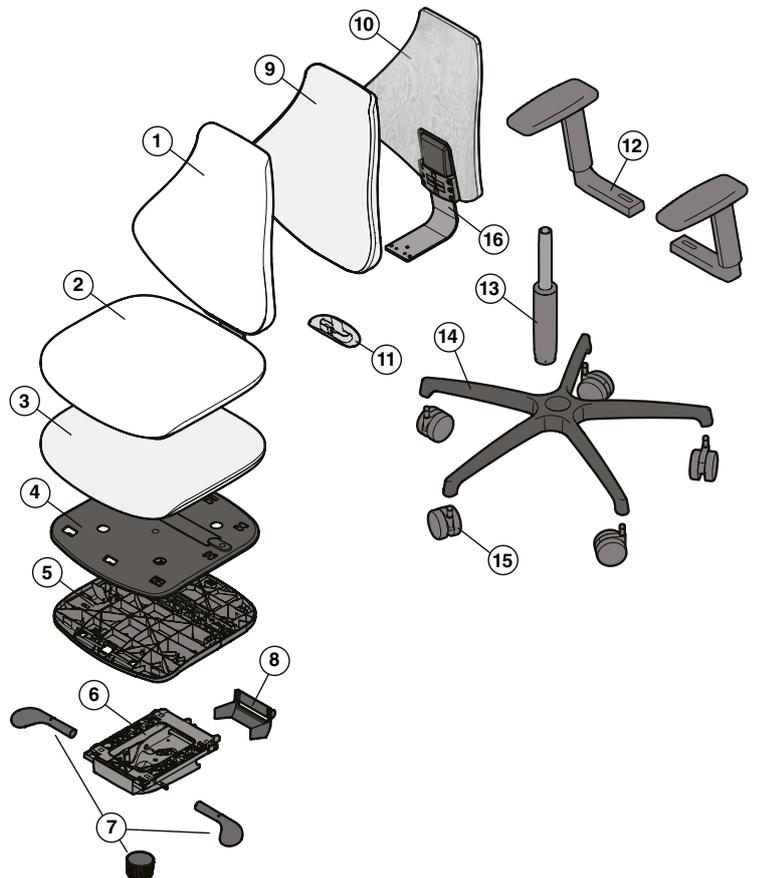

HURRAY

Spare parts

Low chair

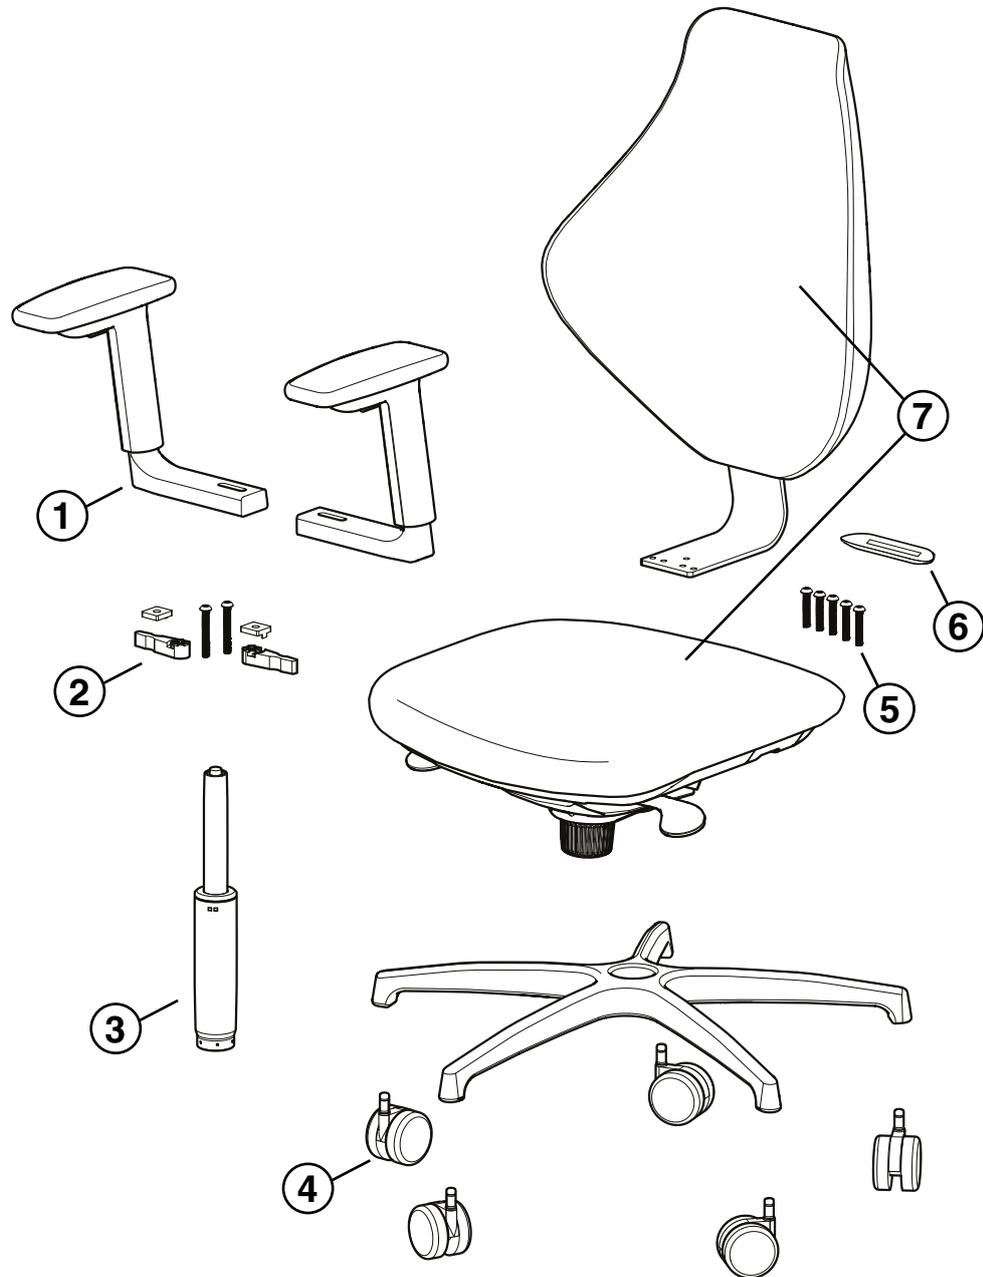

No.	Article	Description
1	14820	Armrests (pair) incl. assembly kit
2	62959	Assembly kit for armrests
3	62960	Gaslift
4	62962	Castors, 5pcs
5	62958	Assembly kit for chair
6	62961	Plastic cover for zipper
7	148311	Upholstery for seat and backrest, black



Contact your local Aj sales office for spare parts.

HURRAY

Disassembly guide






AJ-D-0006
V1.0 2024-09-02

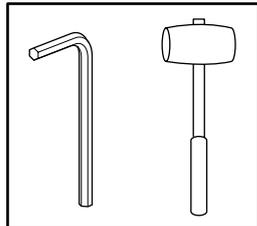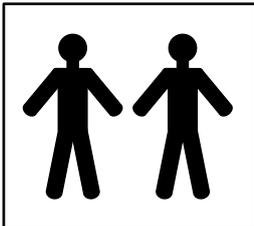



1

NECKREST REMOVAL

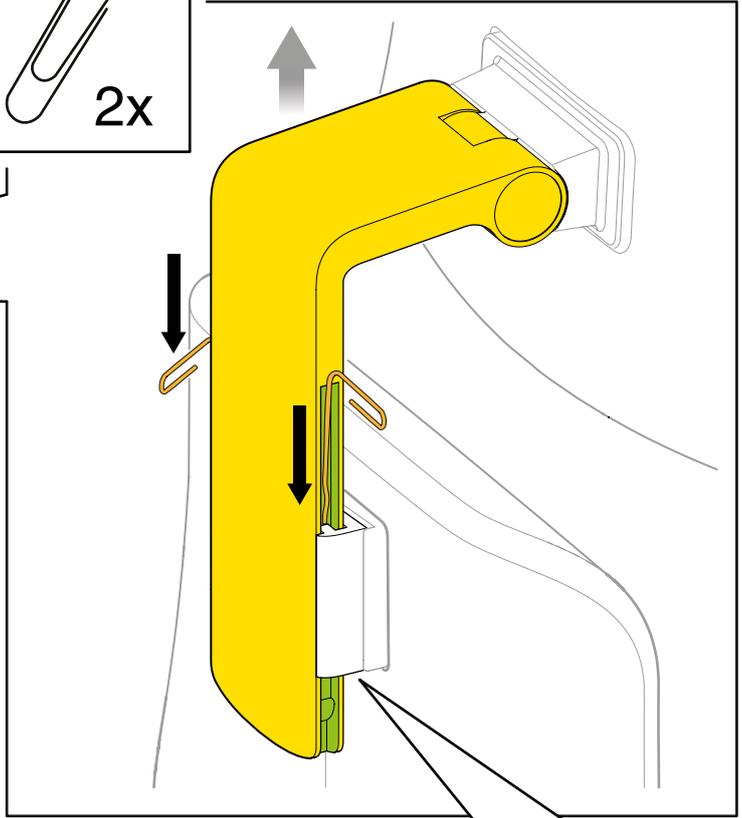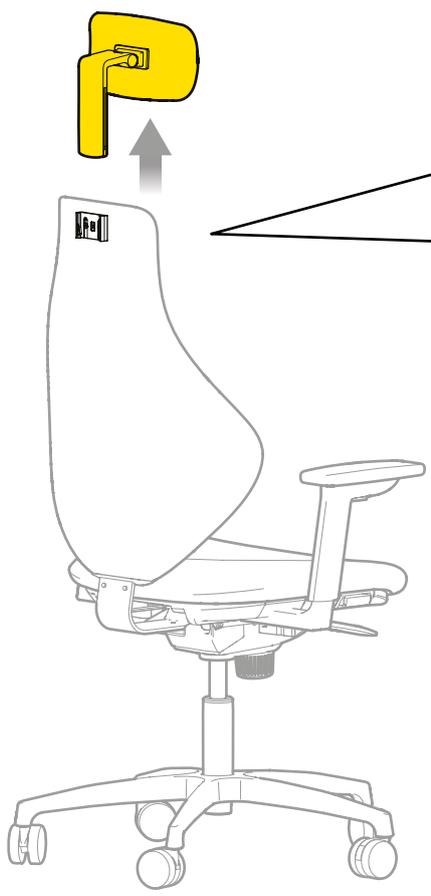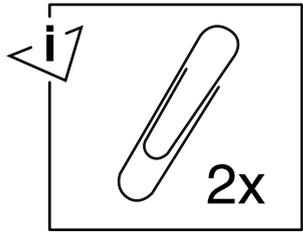


2

SEAT REMOVAL

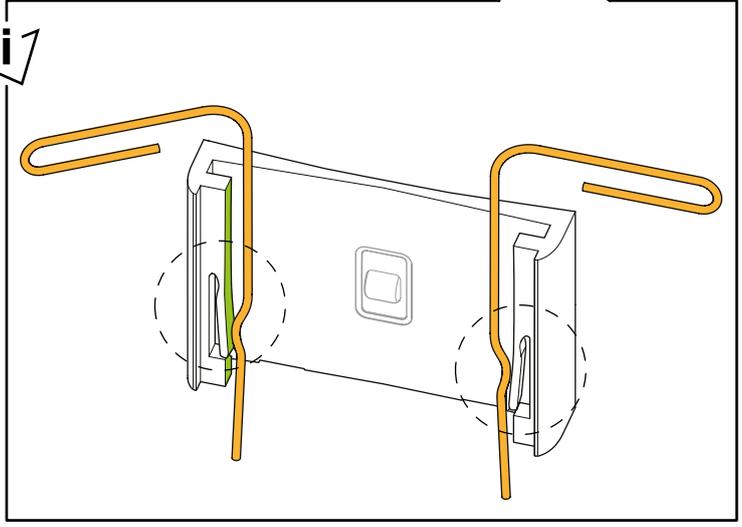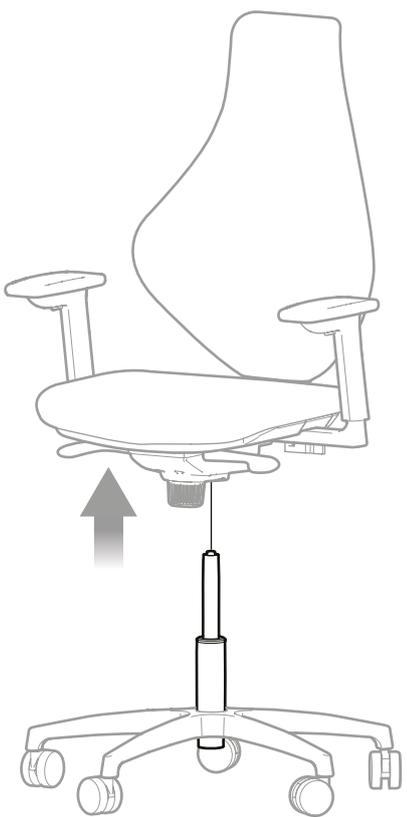


3

ARMREST REMOVAL

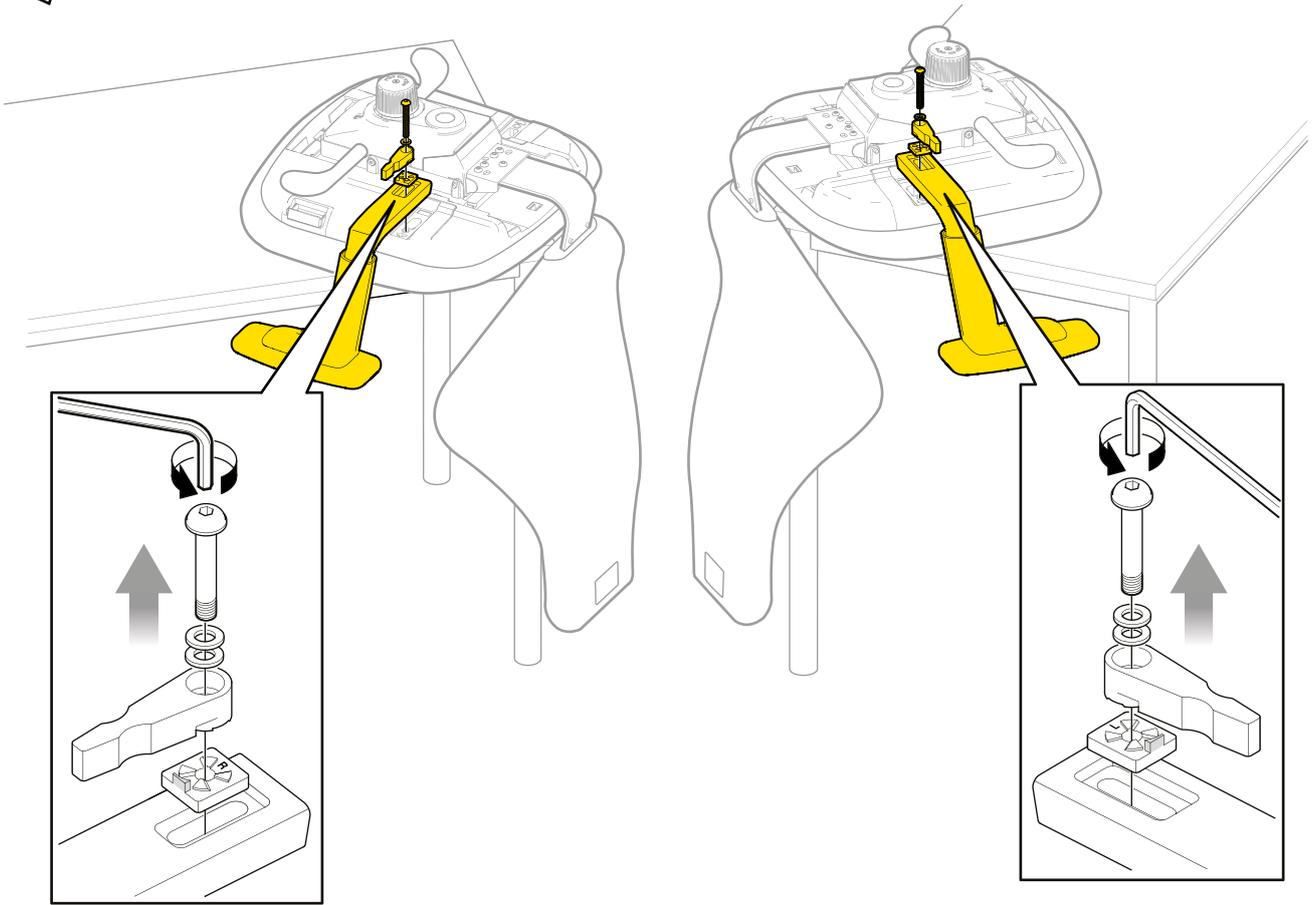


4

BACKREST REMOVAL

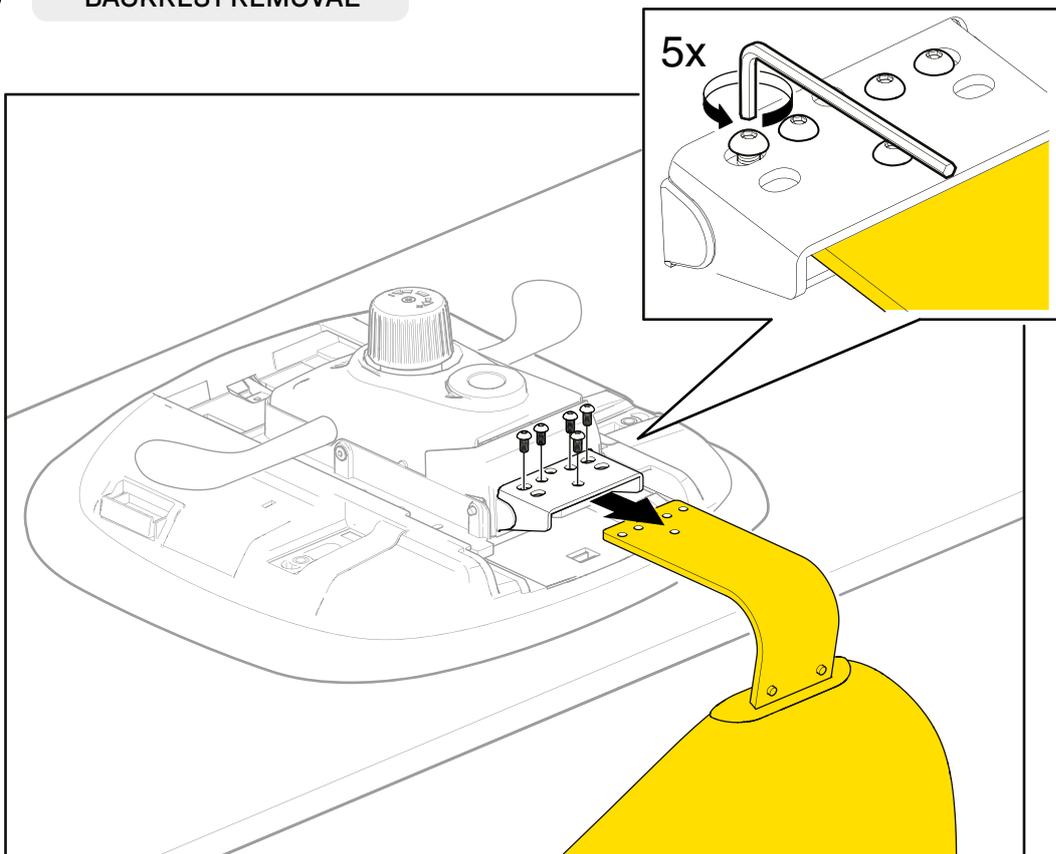


5



WHEEL AND GAS CYLINDER REMOVAL

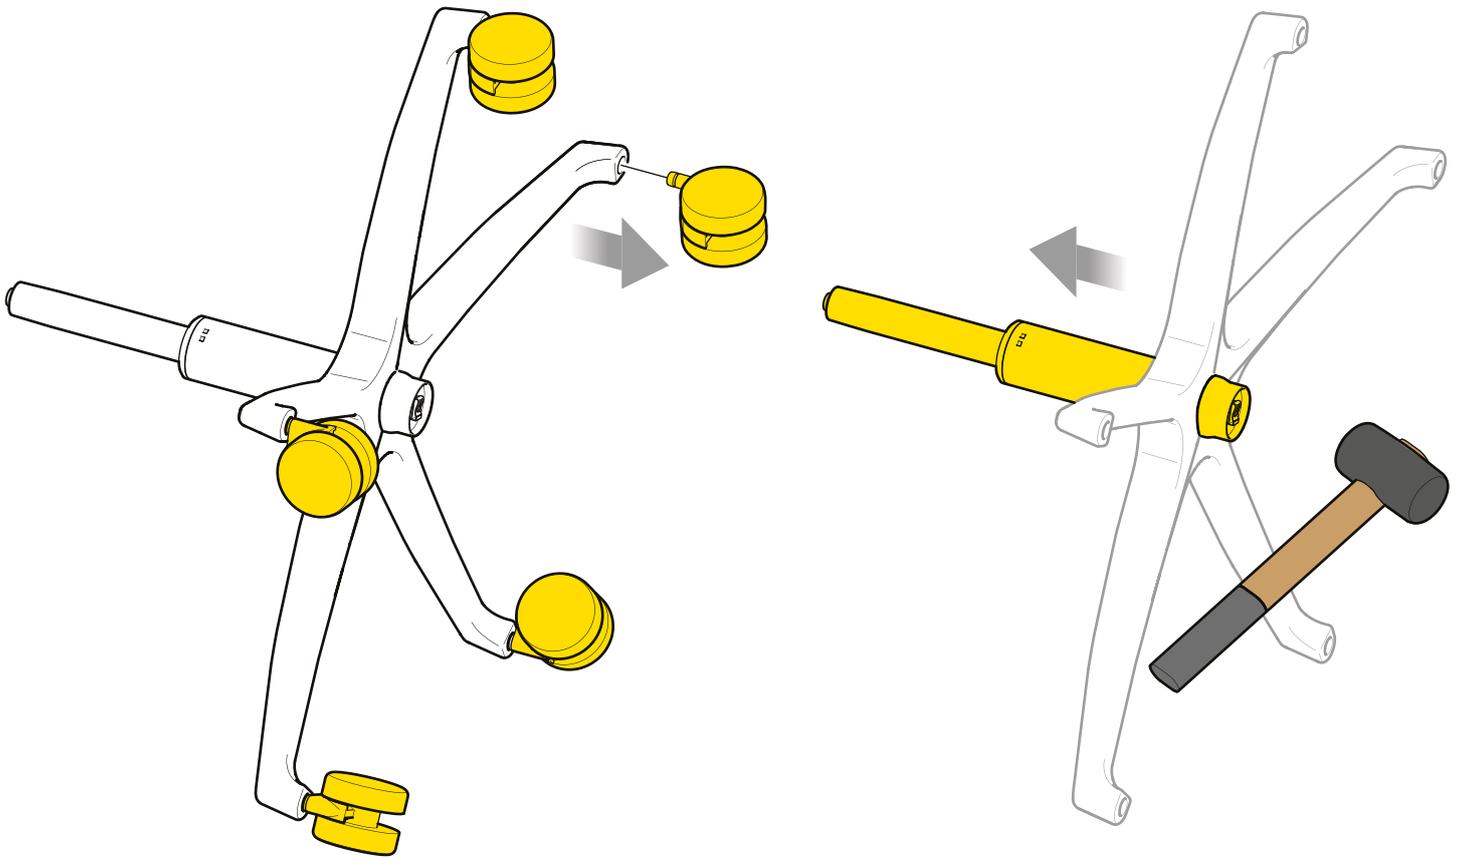

6

SEAT MECHANISM REMOVAL

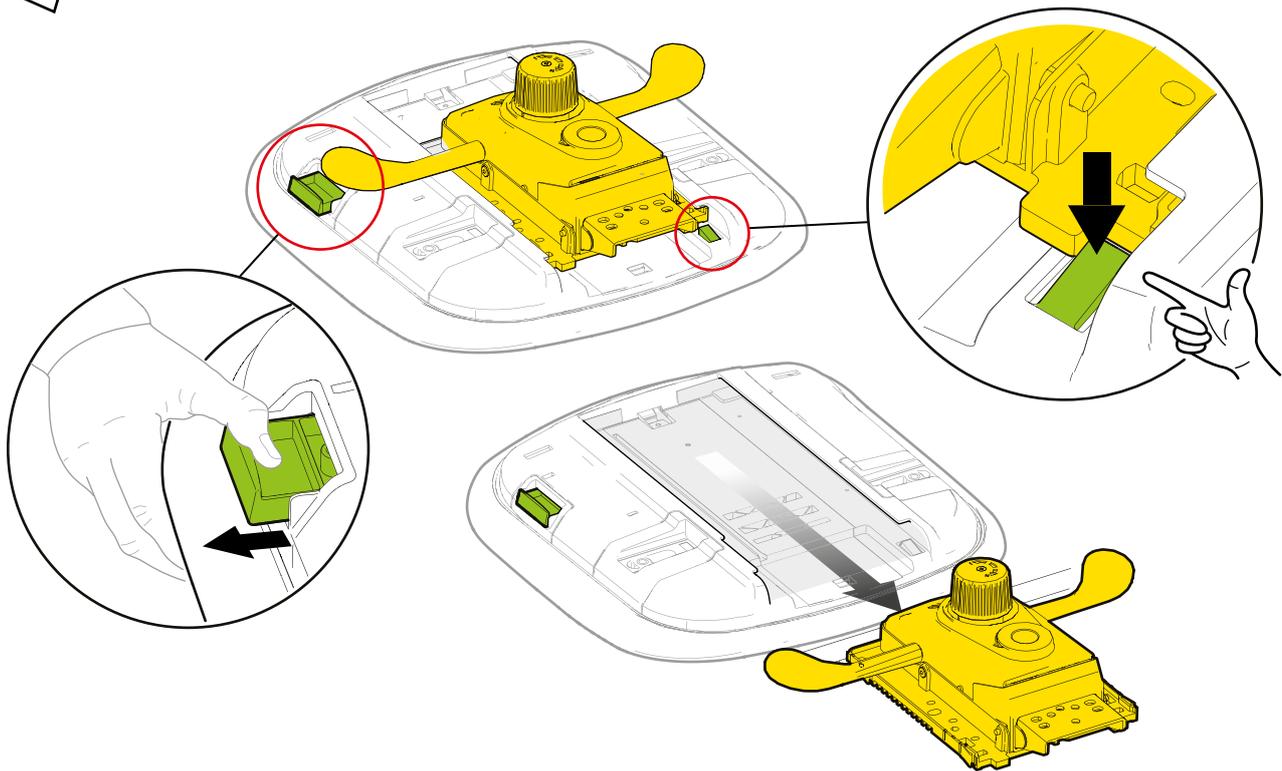

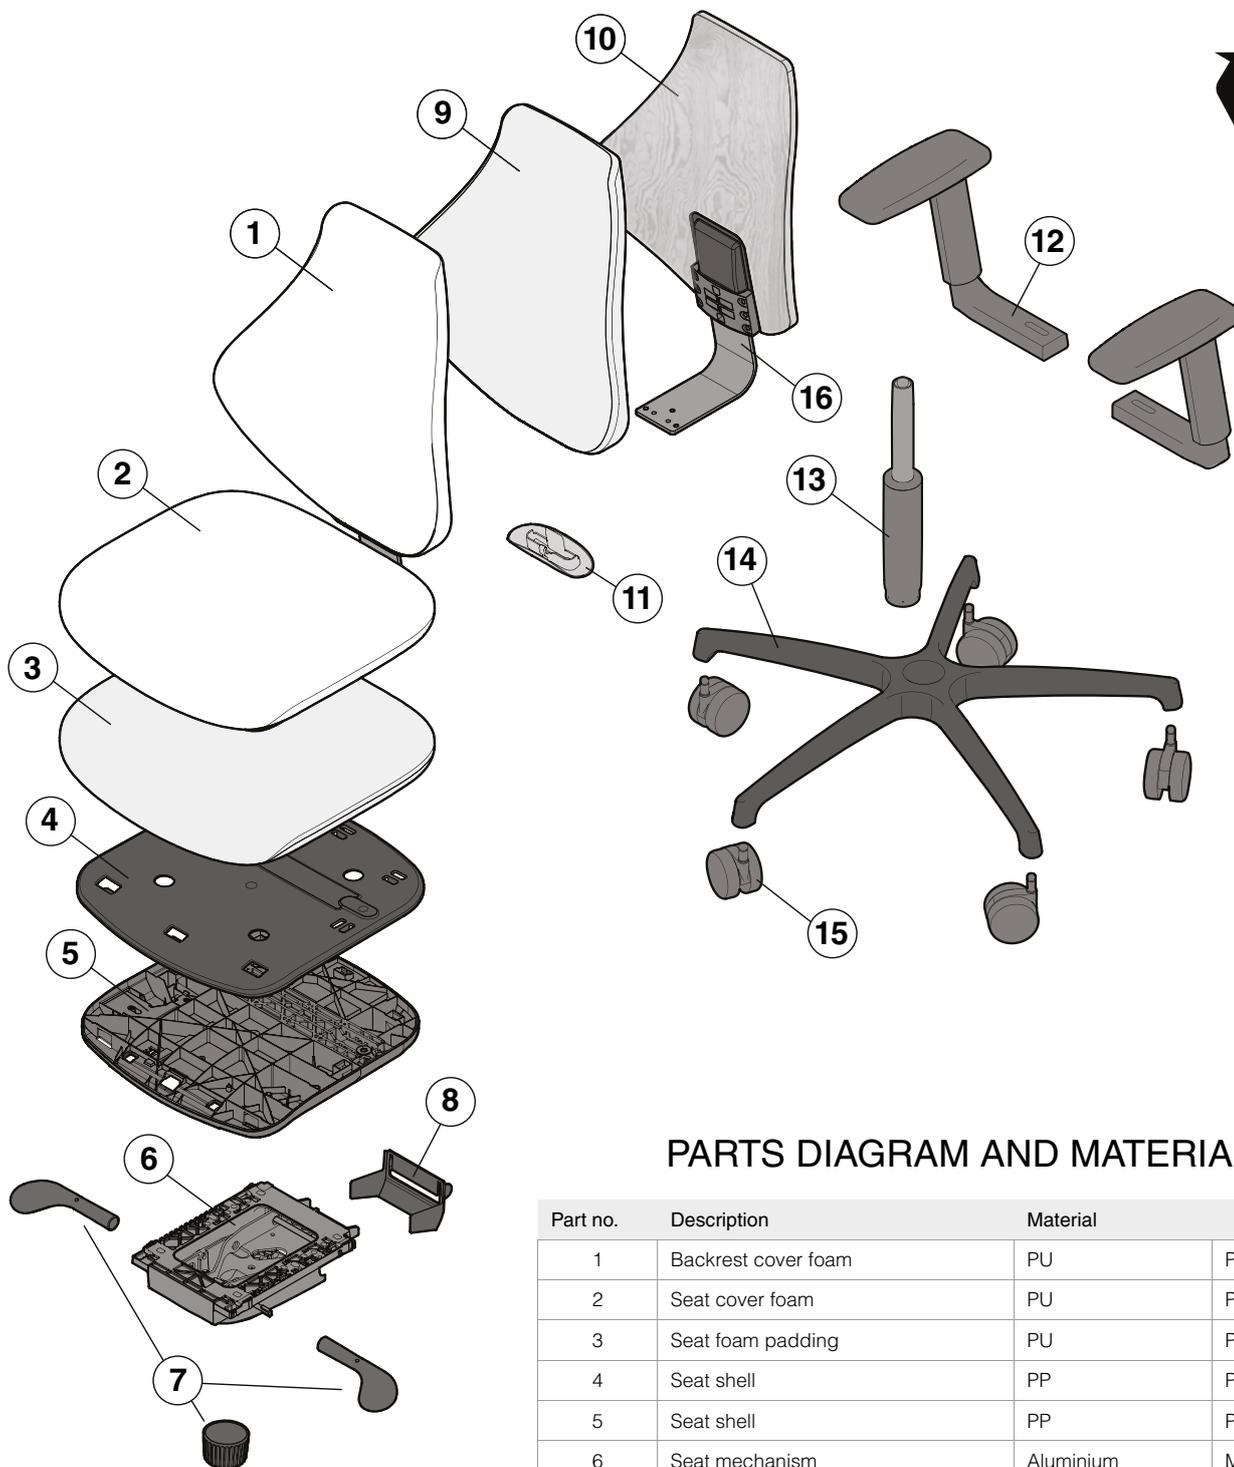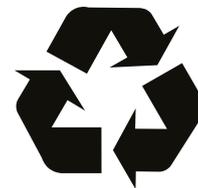

PARTS DIAGRAM AND MATERIALS

Part no.	Description	Material	
1	Backrest cover foam	PU	Plastic
2	Seat cover foam	PU	Plastic
3	Seat foam padding	PU	Plastic
4	Seat shell	PP	Plastic
5	Seat shell	PP	Plastic
6	Seat mechanism	Aluminium	Metal
7	Adjustment knobs/handles	PA	Plastic
8	Cover	PP	Plastic
9	Backrest foam padding	PU	Plastic
10	Backrest shell	Plywood	Wood
11	Cover	PP	Plastic
12	Armrest (pair)	PA	Plastic
13	Gas cylinder	Steel	Metal
14	Wheelbase	PA	Plastic
15	Wheels	PP	Plastic
16	Backrest fixing plate	Steel	Metal



RECYCLING

To disassemble the furniture for proper recycling, start by removing all screws and fasteners, then separate materials like plastic, metal, and fabric before taking them to the respective recycling facilities.



ÅTERVINNING

För att demontera möbelen för återvinning, börja med att ta bort alla skruvar och fästanordningar, sedan separera material som plast, metall och tyg innan du tar dem till respektive återvinningsanläggningar.