


CANTILEVER ASSEMBLY PLAN

Mod. 7.2.3
Rev. 3 del 12.01.07

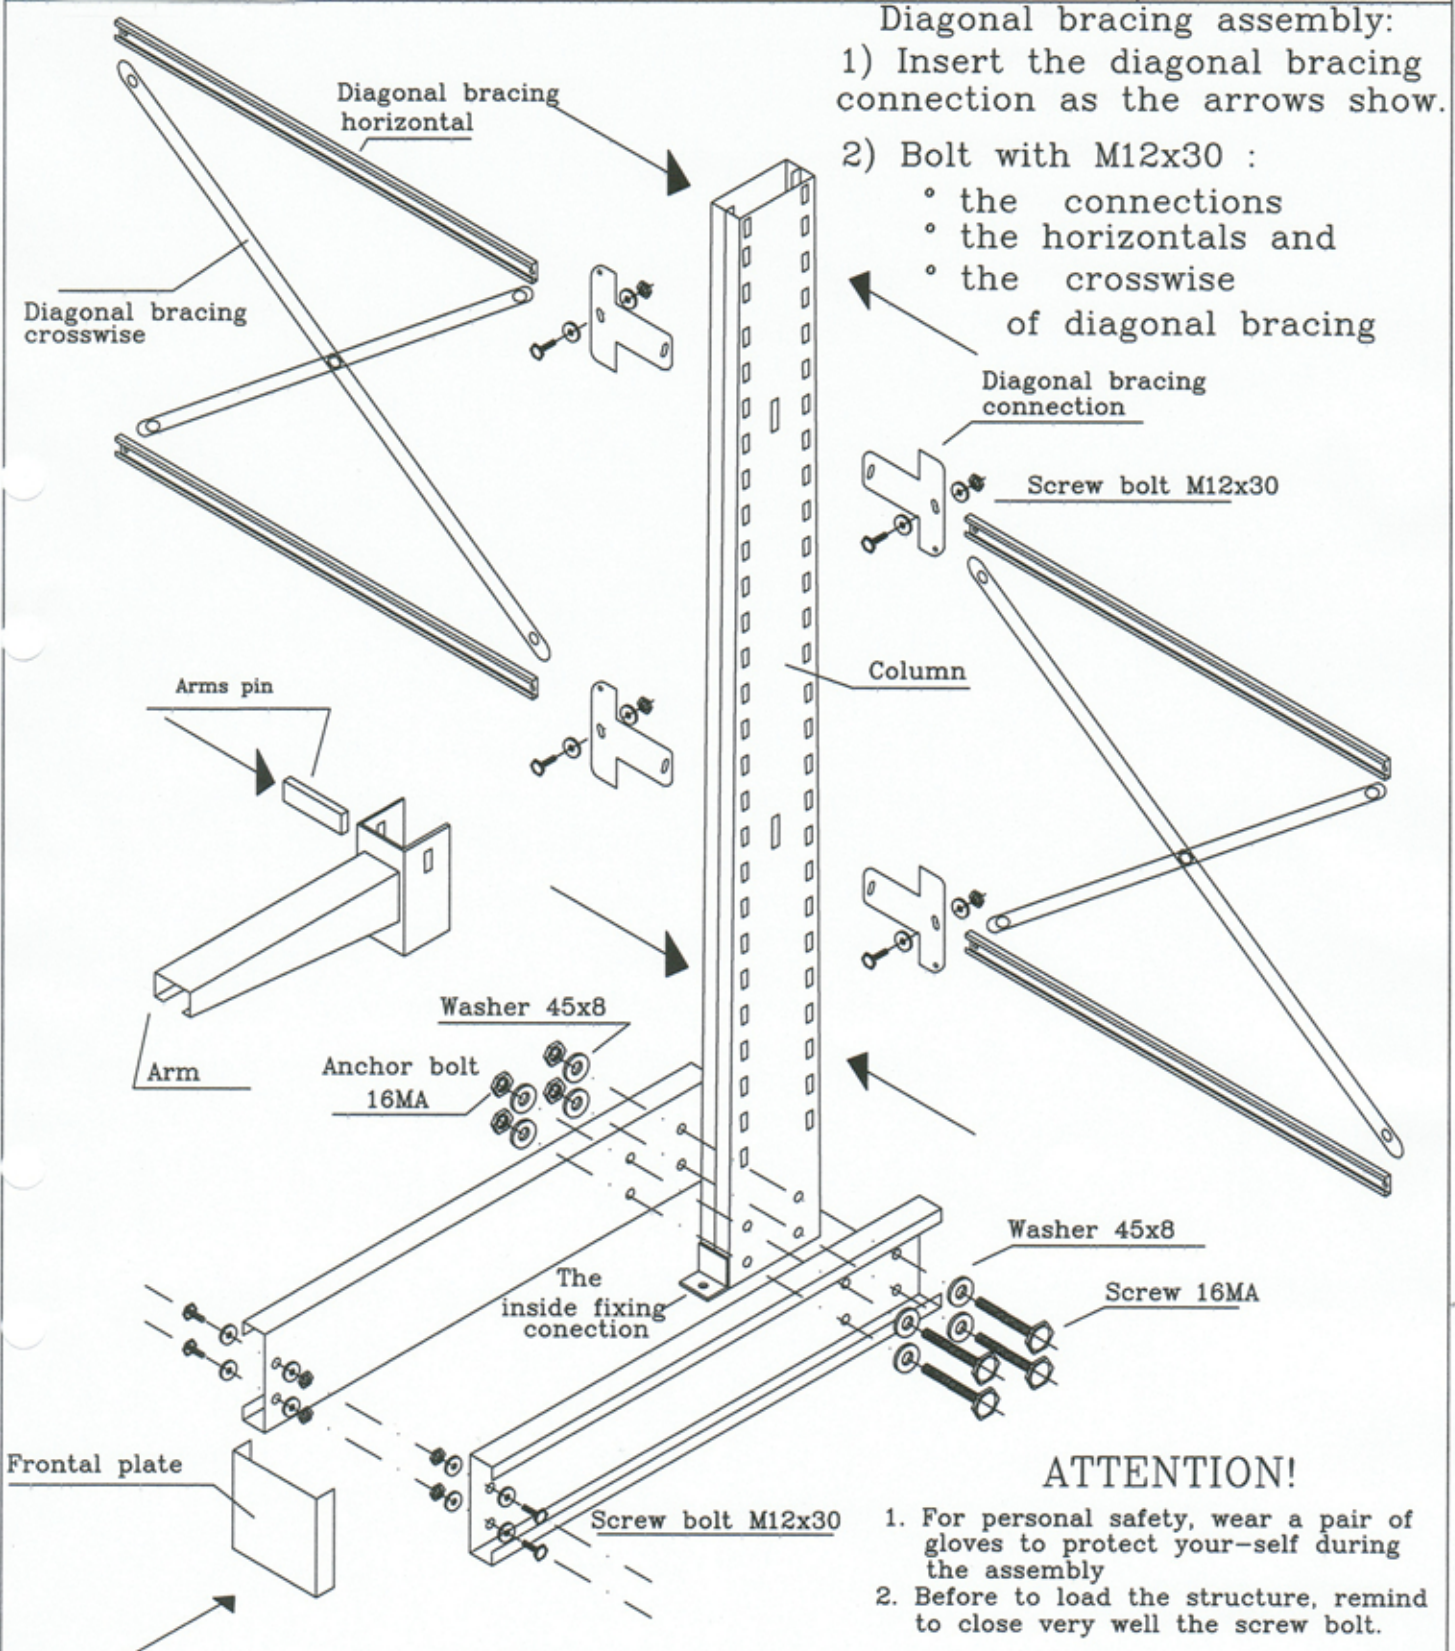

Diagonal bracing assembly:
1) Insert the diagonal bracing connection as the arrows show.

2) Bolt with M12x30 :
 ◦ the connections
 ◦ the horizontals and
 ◦ the crosswise
 of diagonal bracing

ATTENTION!

1. For personal safety, wear a pair of gloves to protect your-self during the assembly
2. Before to load the structure, remind to close very well the screw bolt.

DIAGONAL BRACING ASSEMBLY

A : wheelbase from 400 to 1500 mm

B : wheelbase from 1500 to 2400 mm

C : wheelbase from 2400 to 4000 mm

