


CombiLock 200 Simplex


Quick user guide

Opening and closing

1. Enter the six-digit code. At the correct input, a signal is confirmed and the green LED is flashes.

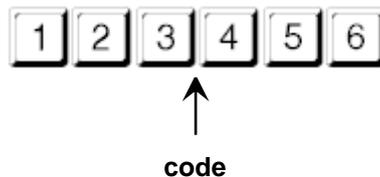

2. After the code has been entered, the lock must be opened within 10 seconds by turning the panel clockwise or the lock will automatically lock.

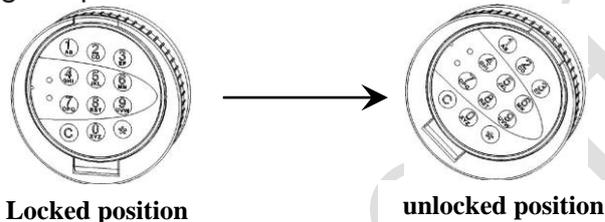


 If incorrect code is entered four times in a row, a 10 second blocking period starts.

3. Now the bolt work can be turned up and the door can be opened.

When locking the cabinet.

To lock the safe, close the door properly and turn back the bolt work. Then turn the panel counterclockwise to the locked position.

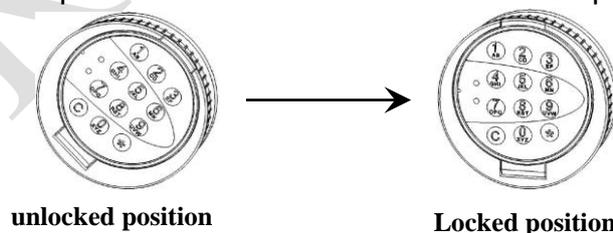

 Before leaving the cabinet it is important to turn the panel and the bolt work to ensure that the lock is locked correctly.

CombiLock 200 Simplex

Quick user guide

Change the master code

Delivery code: 123456

Attention!

The cabinet must be open for code changes.

654321 used as example for the new master code.

**Start programming below within 10 seconds after the lock is unlocked!
The keypad does not need to be turned to unlocked while programming.**

		Enter the current master code
		Enter the new master code
		Repeat the new master code

Battery replacement

To open the battery cover, insert the opening key into the hole on the top of the keypad. Press down and angle the opening key toward the cabinet then use your finger to open the door completely. Enter the code twice after replacing the batteries. For more information on battery replacement see main manual.

For a more extensive user guide, where all features are described in detail, please contact Robur Safe AB for a complete user guide.

Ändring i konstruktion och utrustning förbehålles



**Huvudkontor
Robur Safe AB**

Lundbyvägen 8
311 68 SLÖINGE
Tel: 0346 – 260 260
info@robursafe.com

Försäljningskontor

Enebybergsvägen 8
182 36 Danderyd
Tel: 0346 – 260 260
www.robursafe.com

**Försäljningskontor
Robur Safe A/S**

Nesbruveien 75
1394 Nesbru, NORGE
Tel: 0047 67 16 66 00
info.no@robursafe.com